



WS-1470

零件表PARTS LIST WS-1470

圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY	圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY
01	B010125002	曲軸箱	CRANKCASE	1	09-1	BG10900095200	O形環	O-RING	4
01-3	B100519050	圓內塞頭 1/4"	PLUG 1/4"	3	09-2	BS16208025300	內六角螺絲	HEX SCREW	8
02	B010222000	柱塞油封	PISTON OIL SEAL	3	09-3	BS32208300	彈簧華司	SPRING WASHER	8
03	B010322050	腳座	CRANKCASE STAND	2	09-4	BS31208301	平面華司	WASHER	8
03-1	BS11214030300	六角螺絲	SCREW	4	09-5	B012622050	軸承蓋平墊圈	SHIM	4
03-2	BS32214300	彈簧華司	SPRING WASHER	4	10	B010922000	曲軸油封	CRANKSHAFT OIL SEAL	2
03-3	BS31214201	平面華司	WASHER	4	11	B011122002	曲軸邊蓋	CRANKSHAFT COVER	1
04-1	B013425000	柱塞套固定螺帽	SET NUT	3	11-1	BS16206016300	內六角螺絲	HEX SCREW	4
04-2	B013525000	柱塞套平墊圈	GASKET	3	11-2	BS32206300	彈簧華司	SPRING WASHER	4
04-3	BG10095014500	O形環	O-RING	3	11-3	BS31206310	平面華司	WASHER	4
04-4	BG30099013800	背托環	BACK-UP RING	3	12	B011622002	曲軸箱後蓋	CRANKCASE REAR COVER	1
04-5	B013325000	柱塞套固定螺絲	PISTON SCREW	3	12-1	BG12091216200	O形環	O-RING	1
04-6	B013225000	柱塞套	PISTON SLEEVE	3	13	BS16208025300	內六角螺絲	HEX SCREW	8
04-7	B013522150	柱塞套透氣墊圈	GASKET	3	13-1	BS32208300	彈簧華司	SPRING WASHER	8
04-8	B013522151	柱塞套擋水墊圈	GASKET	3	13-2	BS31208306	平面華司	WASHER	8
04-9	B013122151	柱塞桿	PISTON	3	14	B012201020	油鏡	OIL WINDOW	1
05	B010522000	柱塞銷	PISTON PIN	3	14-1	BG10234028700	O形環	O-RING	1
05-1	BS41015010	扣環	CLIP	6	15	B011823000	排油螺絲	DRAINAGE SCREW	1
06A	B010622002	連桿組	CONNECTING ROD ASSY	3	15-1	BG10130019	O形環	O-RING	1
06-1	BS11210050500	六角螺絲	SET BOLT	6	16	B011901014	加油蓋組	OIL INLET COVER ASSY	1
06-2	BS31210500	平面華司	WASHER	6	17	B031425000	汽缸後座	CYLINDER	1
06-3	B014322000	螺絲防鬆片	LOCK WASHER	3	17-1	BG10270034	O形環	O-RING	3
07	B010822050	曲軸	CRANKSHAFT	1	17-2	BS16212040300	內六角螺絲	HEX SCREW	4
07-1	B012122000	曲軸鍵	CRANKSHAFT KEY	1	18	B021125100	防水油封套	WATERPROOF OIL SEAL COLLAR	3
08	B010722001	軸承	BEARING	2	18-1	BG10410046	O形環	O-RING	3
09	B011022002	軸承油封蓋	BEARING OIL SEAL COVER	2	18-2	B024025000	防水油封墊片	SPACER	3

零件表PARTS LIST WS-1470

圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY	圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY	
18-3	B021025010	防水油封	WATERPROOF OIL SEAL	3	33	B031225000	壓力錶接頭	PRESSURE GAUGE COUPLING	1	
19	B021225000	V迫緊套	V-PACKING COLLAR	3	34	B031109000	壓力錶	PRESSURE GAUGE	1	
20	B020325000	V迫緊	V-PACKING	12						
21	B020225000	V迫緊底座	V-PACKING SEAT	3						
22	BJ62501000	V迫緊彈簧	V-PACKING SPRING	3						
23	B021125000	迫緊上環	PACKING UPPER RING	3						
23-1	BG10384044600	O形環	O-RING	6						
23-2	BG30397044800	背托環	BACK-UP RING	6						
24	B020125000	汽缸前座	SUCTION CHAMBER	1						
24-1	BS16212070300	內六角螺絲	HEX SCREW	6						
25	B040025001	活門組	VALVE ASSY	6						
25-1	B040325000	活門帽	VALVE CAGE	6						
25-2	BJ22501000	活門彈簧	VALVE SPRING	6						
25-3	B040125000	活門塞	VALVE PLUG	6						
25-4	B040225000	活門座	VALVE SEAT	6						
25-5	BG30308034800	背托環	BACKUP RING	6						
25-6	BG10290034	O形環	O-RING	6						
26	B021325000	活門固定螺絲	SET SCREW	6						
26-1	BG30360041900	背托環	BACK-UP RING	6						
26-2	BG10345041500	O形環	O-RING	6						
27	BJ22501210	活門輔助彈簧	VALVE AUXILIARY SPRING	6						
28	B040925000	活門固定片	SET PLATE	6						
29	B021725000	進水接頭	INLET CONNECTOR	1						
30	B023518000	安全弁接頭	SAFETY VALVE COUPLING	1						
*31	B060022051	安全弁	SAFETY VALVE ASSY	1	*31 零件表及展開圖請參閱第4頁。			*31 parts list & diagram please refer to page 4.		
32	BS50032001	外六角塞頭 PT1-1/4"	PLUG PT1-1/4"	1						

2024.04V

