


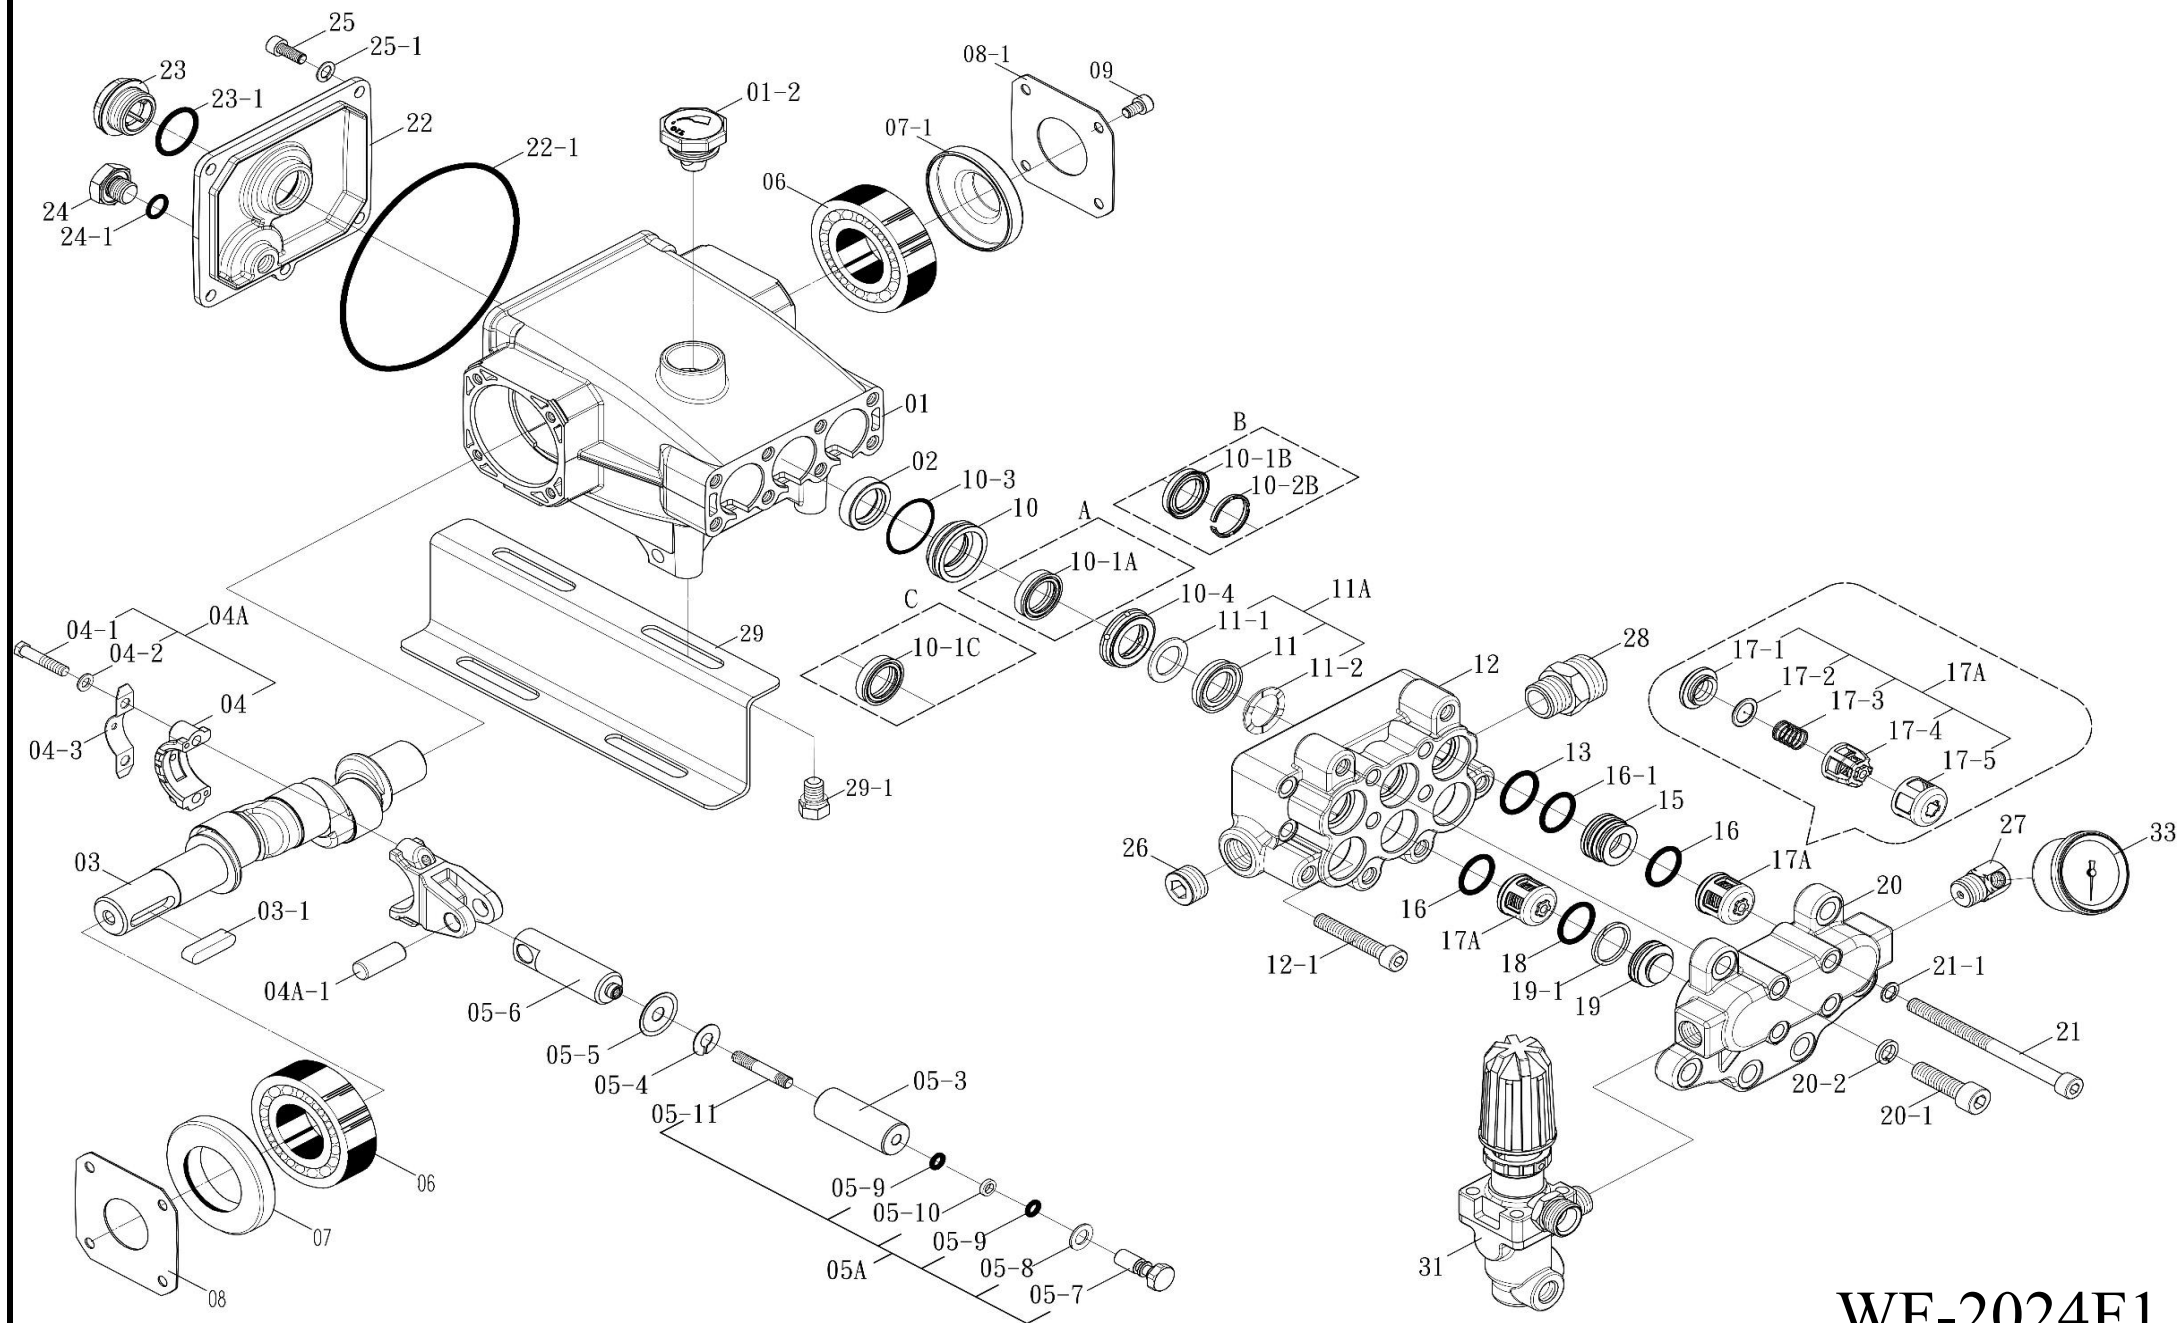

WF-2024F1
WF-2030F1

零件表PARTS LIST WF-2024F1 / WF-2030F1


圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY		圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY	
01	B010123000	曲軸箱	CRANKCASE	1		08-1	B011023100	全密曲軸油封蓋	END COVER OIL SEAL COVER	1	
01-2	B011901014	加油蓋組	OIL INLET COVER ASSY	1		09	BS16206016300	內六角螺絲	SCREW	8	
02	B010210000	柱塞油封	PISTON OIL SEAL	3		10	B021110115	迫緊上環	PACKING UPPER RING	3	
03	B010823200	曲軸 偏心15mm (WF-2024F1)	CRANKSHAFT (WF-2024F1)	1		10-1A	B021023820	防水油封 (A款)	WATERPROOF OIL SEAL (A MODEL)	3	
	B010823400	曲軸 偏心18mm (WF-2030F1)	CRANKSHAFT (WF-2030F1)			10-1B	B021010212	防水油封 (B款)	WATERPROOF OIL SEAL (B MODEL)	3	
03-1	B012109000	曲軸鍵	CRANKSHAFT KEY	1		10-2B	B020210114	防水油封底座 (B款)	WATERPROOF OIL SEAL SEAT (B MODEL)	3	
04A	B010623001	連桿組	CONNECTING ROD ASSY	3		10-1C	B021023820001	防水油封 (C款)	WATERPROOF OIL SEAL (C MODEL)	3	
04	N/A	連桿	CONNECTING ROD	3		10-3	BG10314035040	O形環	O-RING	3	
04-1	BS11206030500	六角螺絲	SCREW	6		10-4	B021210115	迫緊中間環	U-PACKING SPACER RING	3	
04-2	BS31206501	平面華司	WASHER	6		11	B020310210	U迫緊	U-PACKING	3	
04-3	B014311000	螺絲防鬆片	LOCK WASHER	3		11-1	B020310220	U迫緊墊片	U-PACKING SPACER	3	
04A-1	B010523000	柱塞銷	PISTON PIN	3		11-2	B020310230	U迫緊底座	U-PACKING SEAT	3	
05-3	B013223810	柱塞套	CERAMIC PISTON SLEEVE	3		12	B031423801	汽缸後座	INLET CHAMBER	1	
05-4	B013511110	柱塞套透氣墊圈	GASKET	3		12-1	BS16208050300	內六角螺絲	SCREW	4	
05-5	B013510020	柱塞套平墊圈	GASKET	3		13	BG10220027011	O形環	O-RING	3	
05-6	B013123002	柱塞桿	PISTON ROD	3		15	B021323810	出水活門固定座	OUTLET VALVE SEAT	3	
05A	B015223001	柱塞螺絲組	PISTON SCREW ASSY	3		16/16-1	BG10200025010	O形環	O-RING	6/3	
05-7	B013410020	柱塞套固定螺帽	PISTON SET NUT	3		17A	B040008032	活門組	VALVE ASSY	6	
05-8	B013510002	柱塞套平墊圈	GASKET	3		17-1	B040223801	活門座	VALVE SEAT	6	
05-9	BG10050009060	O形環	O-RING	6		17-2	B040123800	活門塞	VALVE PLUG	6	
05-10	BG30053008200	背托環	BACK-UP RING	3		17-3	BJ20202010	活門彈簧	VALVE SPRING	6	
05-11	B013323010	柱塞套固定螺絲	PISTON SET SCREW	3		17-4	B040313000	活門帽	VALVE CAGE	6	
06	B010710010	軸承	BEARING	2		17-5	B040813001	活門套	VALVE CAGE	6	
07	B010910040	曲軸油封	CRANKSHAFT OIL SEAL	1		18	BG10210026010	O形環	O-RING	3	
07-1	B010923100	全密曲軸油封	END COVER OIL SEAL	1		19	B021323811	進水活門固定座	INLET VALVE SEAT	3	
08	B011023000	曲軸油封蓋	CRANKSHAFT OIL SEAL COVER	1		19-1	BG30217026	背托環	BACK-UP RING	3	

零件表PARTS LIST WF-2024F1 / WF-2030F1

圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY	
20	B020123801	汽缸前座	MANIFOLD	1	
20-1	BS16210035300	內六角螺絲	SCRW	6	
20-2	BS32210300	彈簧華司	SPRING WASHER	6	
21	BS16208110300	內六角螺絲	SCREW	4	
21-1	BS32208300	彈簧華司	SPRING WASHER	4	
22	B011623000	曲軸箱後蓋	REAR COVER	1	
22-1	BG11012106500	O形環	O-RING	1	
23	B012201020	油鏡	OIL WINDOW	1	
23-1	BG10234028700	O形環	O-RING	1	
24	B011823000	排油螺絲	DRAINAGE SCREW	1	
24-1	BG10130019	O形環	O-RING	1	
25	BS16206016300	內六角螺絲	SCREW	5	
25-1	BS32206300	彈簧華司	SPRING WASHER	5	
26	1S50016040	內六角油塞 PT1/2	PLUG PT1/2	1	
27	B031210000	壓力錶接頭	PRESSURE GAUGE CONNECTOR	1	
28	B071818010	進水接頭	INLET CONNECTOR	1	
29	B010302000	腳座	CRANKCASE STAND	2	
29-1	BS11210015222	六角螺絲附華司	HEX SCREW W/ WASHER	4	
*31	B070008002	自動洩壓總成	UNLOADING VALVE ASSY	1	
33	B031110000	壓力錶	PRESSURE GAUGE (BACK ENTRY)	1	
ACC.	B150110003	吸水管組3/4"*10尺	INLET HOSE ASSY 3/4"*10FT	1	
ACC.	B150201001	迴水管組 1/2"*9尺	OVERFLOW HOSE ASSY 1/2"*9FT	1	
ACC.	BP21422240100	皮帶輪 8B2*24*8	PULLEY 8B2*24*8	1	
ACC.	BS11112032121	皮帶輪螺絲	PULLEY SET BOLT	1	
*31零件表及展開圖請參閱第4頁。			*31 parts list & diagram please refer to page 4.		



零件表PARTS LIST B070008002 自動洩壓總成 / UNLOADING VALVE ASSEMBLY

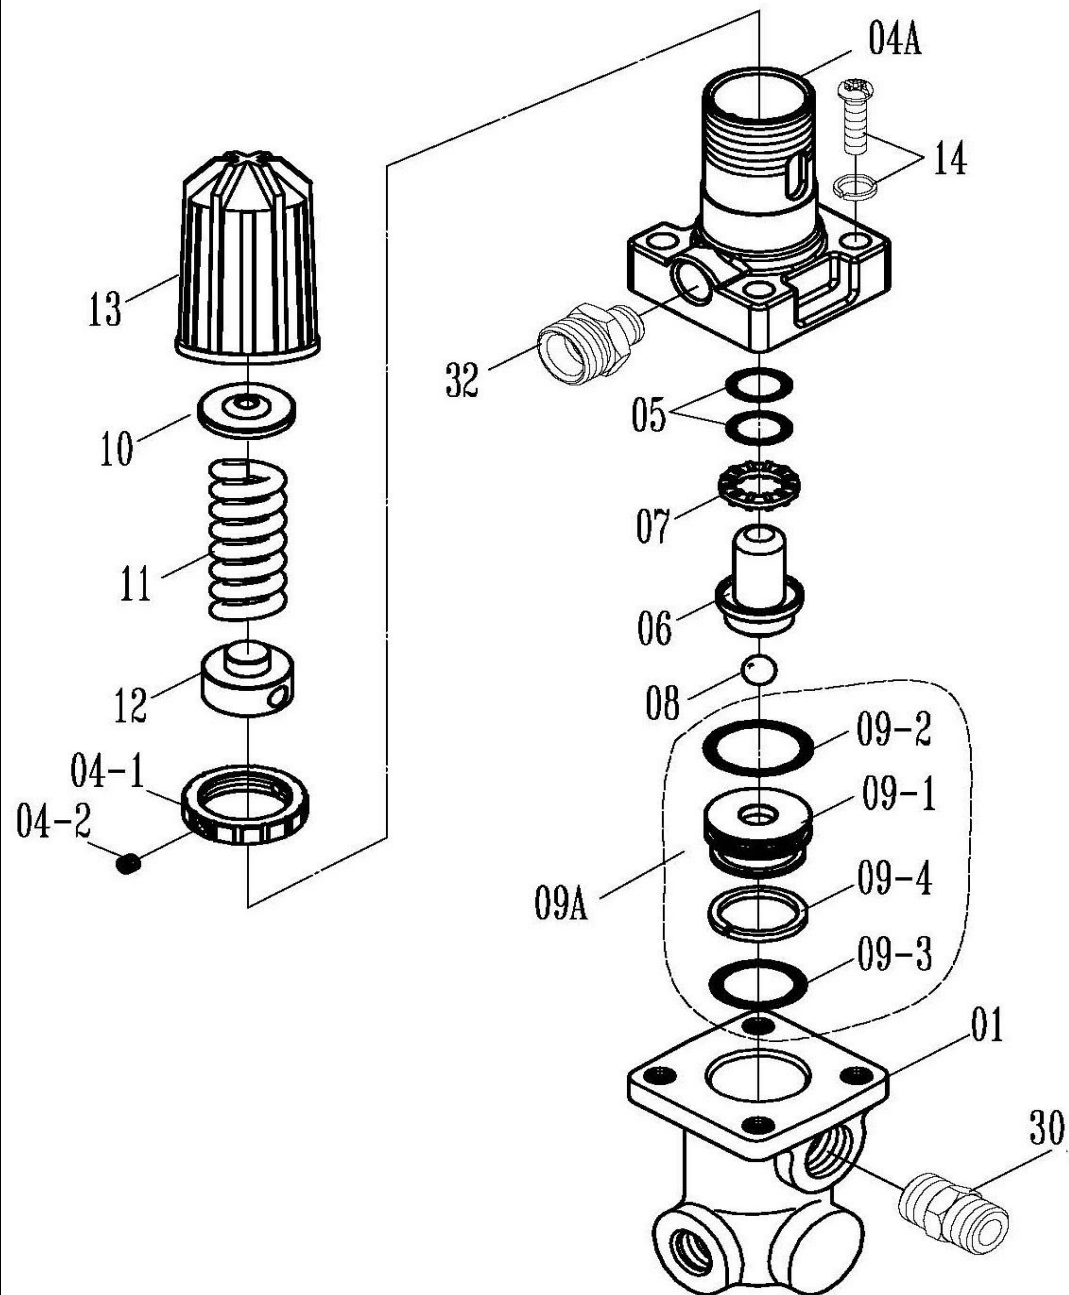[illegible]

B070008002