




25B SERIES

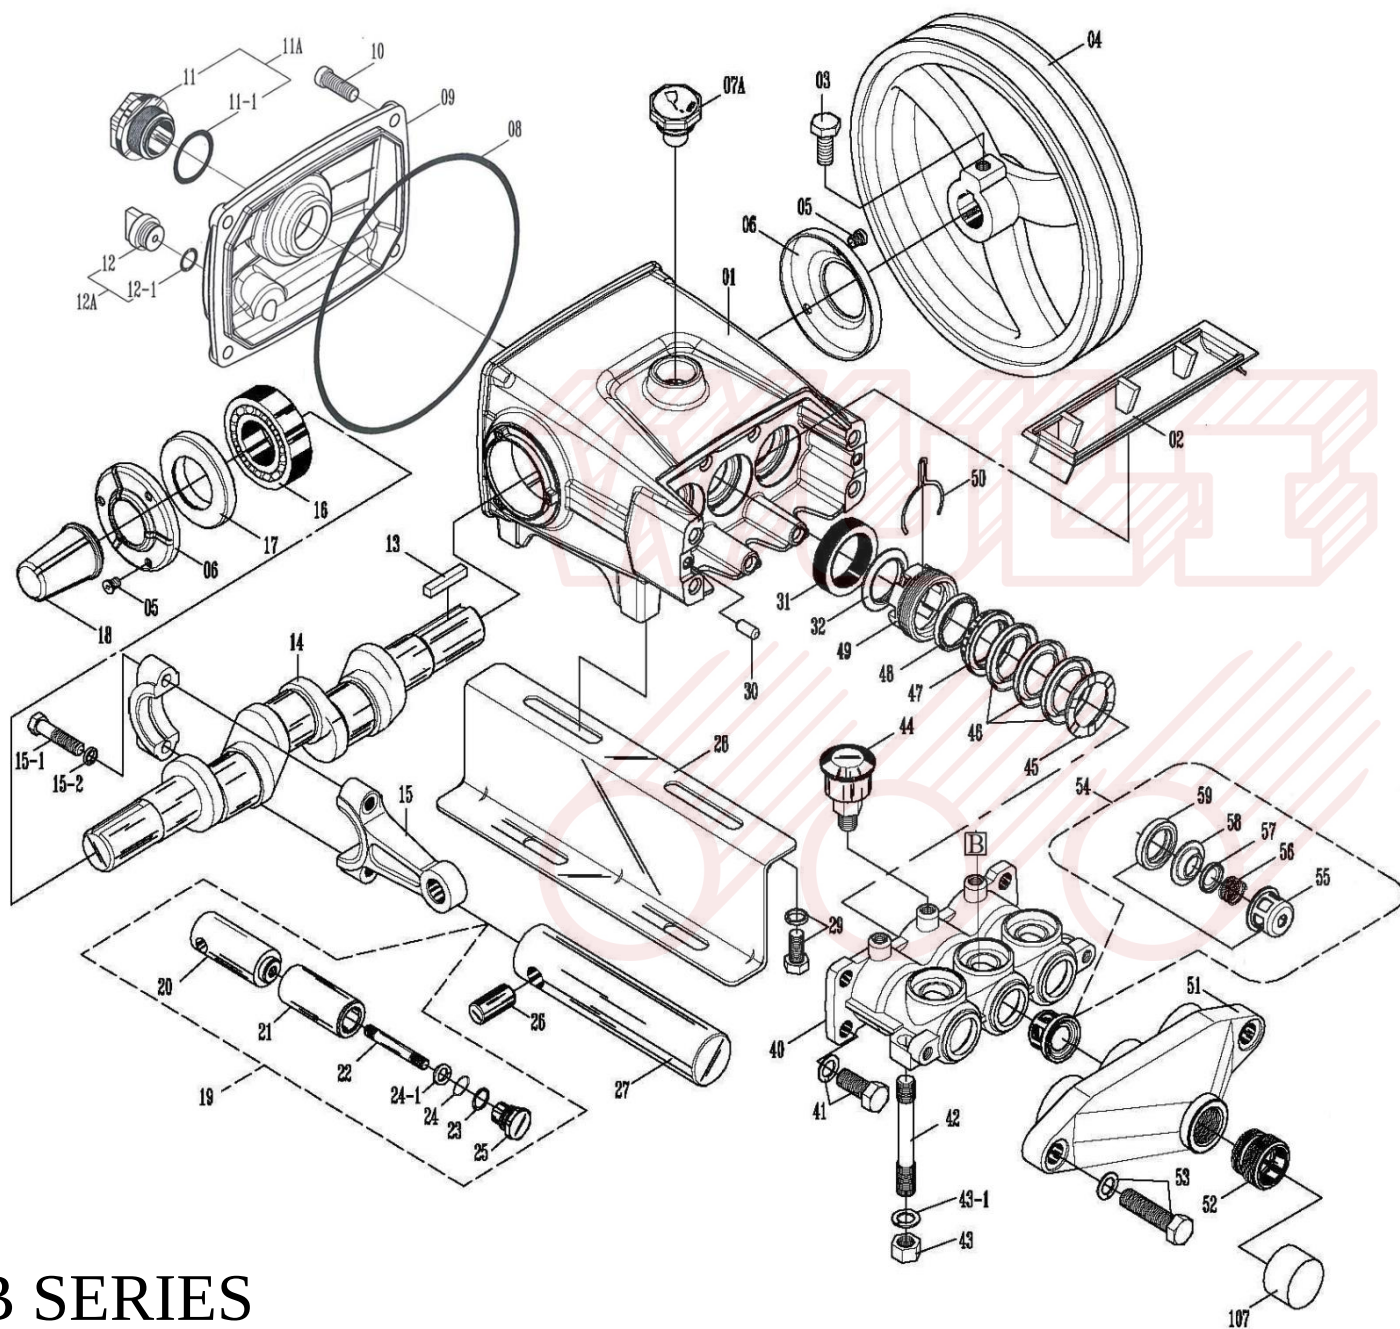


WL-25ASB
WL-25ASBC

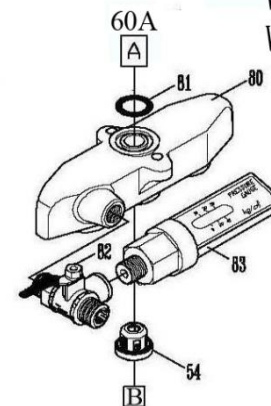

W-25B
W-25BC

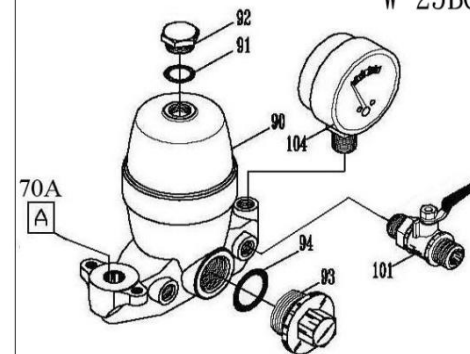

WL-25B
WL-25BC

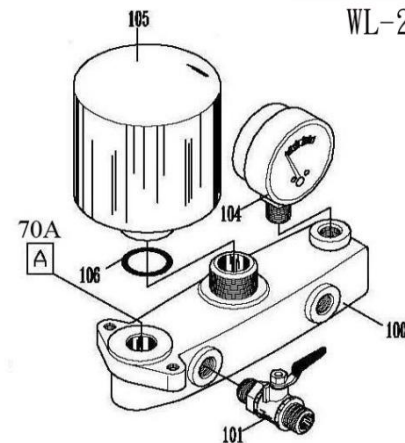

零件表PARTS LIST W-25B / W-25BC / WL-25B / WL-25BC / WL-25ASB / WL-25ASBC

圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY		圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY	
01	B010101300	曲軸箱 (紅)	CRANKCASE (RED)	1		19	B013007001	陶瓷柱塞組	CERAMIC PISTON ASSY	3	
	B010101310	曲軸箱 (藍)	CRANKCASE (BLUE)			20	B013107000	柱塞桿	PISTON	3	
02	B011401000	防塵蓋	DUSTPROOF CAP	1		21	B013207001	柱塞套	CERAMIC PISTON SLEEVE	3	
03	BS11110019121	六角螺絲	SET BOLT	1		22	B013307000	柱塞套固定螺絲	PISTON SCREW	3	
04	BP11212190300	皮帶輪 7A2*19*5	PULLEY 7A2*19*5	1		23	B013507000	柱塞套平墊圈	GASKET	3	
05	BS12106006200	大扁頭螺絲	SCREW	6		24	BG10095014520	O形環	O-RING	3	
06	B011001000	曲軸油封蓋 A	CRANKSHAFT OIL SEAL COVER (A)	2		24-1	BG30101014010	背托環	BACK-UP RING	3	
07A	B011901014	加油蓋組	OIL INLET COVER ASSY	1		25	B013407000	柱塞套固定螺帽	SET NUT	3	
08	B011701000	後蓋迫緊	REAR COVER PACKING	1		26	B010501110	柱塞銷	PISTON PIN	3	
09	B011601021	曲軸箱後蓋 (紅)	REAR COVER (RED)	1		27	B010401010	不鏽鋼柱塞	SST PISTON	3	
	B011601022	曲軸箱後蓋 (藍)	REAR COVER (BLUE)			28	B010301000	腳座	CRANKCASE STAND	2	
10	BS12108016100	大扁頭螺絲	SCREW	4		29	BS11112016122	六角螺絲附華司	SET BOLT W/ WASHER	4	
11A	B012201003	油鏡組	OIL WINDOW ASSY	1		30	B012901110	汽缸銷	SET PIN	2	
11	B012201020	油鏡	OIL WINDOW	1		31	B010201000	柱塞油封	PISTON OIL SEAL	3	
11-1	BG10234028700	O形環	O-RING	1		32	B011201010	柱塞中間皮	WATERPROOF RING	3	
12A	B011801001	排油螺絲組	DRAINAGE SCREW ASSY	1		40	B020101000	汽缸	CYLINDER	1	
12	B011801000	排油螺絲	DRAINAGE SCREW	1		41	BS11110025122	六角螺絲附華司	SET BOLT W/ WASHER	4	
12-1	BG10110015	O形環	O-RING	1		42	BS15112060100	雙頭牙螺絲	DOUBLE-END SCREW	2	
13	B012101110	曲軸鍵	CRANKSHAFT KEY	1		43	BS21112100	六角螺帽	NUT	2	
14	B010801110	曲軸	CRANKSHAFT	1		43-1	BS32112200	彈簧華司	SPRING WASHER	2	
15	B010601001	連桿	CONNECTING ROD	3		44	B020801002	黃油杯	GREASE CUP	3	
15-1	BS11206025500	六角螺絲	SET BOLT	6		45	B020201020	V迫緊底座	V-PACKING SEAT	3	
15-2	BS32206501	彈簧華司	SPRING WASHER	6		46	B020301120	V迫緊 (氟素)	V-PACKING (F.P.M.)	9	
16	B010701050	軸承	BEARING	2			B020301130	V迫緊 (A120)	V-PACKING (A120)		
17	B010901000	曲軸油封	CRANKSHAFT OIL SEAL	2			B020301110	V迫緊 (乙炔隆)	V-PACKING (UCL)		
18	B011101020	曲軸油封蓋 B	CRANKSHAFT OIL SEAL COVER (B)	1		47	B020401011	黃油環 (POM)	GREASE RING (POM)	3	


零件表PARTS LIST W-25B / W-25BC / WL-25B / WL-25BC / WL-25ASB / WL-25ASBC

圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY		圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY	
47	B020401110	黃油環 (銅)	GREASE RING (BRASS)	3		105	B030401110	空氣室 (WL-)	AIR CHAMBER (WL-)	1	
48	B020901000	V型油環	V-TYPE O-RING	3		106	BG10219027100	O形環 (WL-)	O-RING (WL-)	1	
49	B020501000	調整環	ADJUSTING RING	3		107	B031501110	*進水口蓋 (選配)	*SUCTION CHAMBER CAP (OPTIONAL)	1	
50	B020701010	調整環固定夾	SET CLIP	3		ACC.	B150101001	吸水管組 3/4"*9尺	SUCTION HOSE ASSY	1	
51/52	B031401031	進水室含銅接頭	SUCTION CHAMBER W/CONNECTOR	1		ACC.	B150201001	迴水管組 1/2"*9尺	OVERFLOW HOSE ASSY	1	
51	B031401030	進水室	SUCTION CHAMBER	1		ACC.	B150601110	過濾網申目	FILTER SOCKET	1	
52	B032301110	進水室接頭	CONNECTOR	1		ACC.	B150901110	過濾網	FILTER	1	
53	BS11112035122	六角螺絲附華司	SET BOLT W/ WASHER	2							
54	B040001001	活門組	VALVE ASSY	6							
55	B040301000	活門帽	VALVE CAGE	6							
56	BJ20101000	活門彈簧	VALVE SPRING	6							
57	B040101000	活門塞	VALVE PLUG	6							
58	B040201000	活門座	VALVE SEAT	6							
59	B040401000	活門皮	VALVE PACKING	6							
*60A	B050001311	自動洩壓總成(G2)	UNLOADING VALVE ASSY (G2)	1							
	B050001331	自動洩壓總成(G3)	UNLOADING VALVE ASSY (G3)								
*70A	B050001004	安全弁(不含調壓螺絲組)(G2)	SAFETY VALVE ASSY(W/O KNOB) (G2)	1							
	B050001006	安全弁(G3)	SAFETY VALVE ASSY(G3)								
90	B030101000	出水室連結空氣室 (W-)	OUTLET & AIR CHAMBER (W-)	1							
91	BG10140018500	O形環 (W-)	O-RING (W-)	1							
92	B030801000	空氣室塞頭 (W-)	AIR CHAMBER PLUG (W-)	1							
93	B030701000	出水塞頭 (W-)	PLUG 25B (W-)	1		*60A(G2)零件表及展開圖請參閱第4頁。			*60A(G2) parts list & diagram please refer to page 4.		
94	BG10219027100	O形環 (W-)	O-RING (W-)	1		*60A(G3)零件表及展開圖請參閱第5頁。			*60A(G3) parts list & diagram please refer to page 5.		
100	B030201000	出水室 (WL-)	OUTLET CHAMBER (WL-)	1		*70A(G2)零件表及展開圖請參閱第6頁。			*70A(G2) parts list & diagram please refer to page 6.		
101	B031601110	球形閥 8.5mm	BALL COCK 8.5mm	2		*70A(G3)零件表及展開圖請參閱第7頁。			*70A(G3) parts list & diagram please refer to page 7.		
104	B031101000	壓力錶	PRESSURE GAUGE	1					2020.02V		

零件表PARTS LIST 自動洩壓總成 B050001311 (G2) / UNLOADING VALVE ASSEMBLY (G2)

WL-25ASB/520AS系列用


圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY	圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY
61	B050201000	洩壓汽缸套	UNLOADING VALVE CYLINDER	1	74	BJ40101000	調壓彈簧	PRESSURE REGULATING SPRING	1
*61-1	BS13110047122	六角十字螺絲附華司	SET BOLT W/ WASHER	2	75	B051301000	彈簧上座	SPRING SEAT (UPPER)	1
61-2	BG10220027010	O形環	O-RING	2	76	B050401000	調壓彈簧套	PRESSURE REGULATING PIPE	1
62	BJ50101000	洩壓輔助彈簧	AUXILIARY SPRING	1	*79A	B053001001	調壓螺絲組	PRESSURE REGULATING KNOB ASSY	1
63A	B052201001	柱塞活門組	PISTON VALVE ASSY	1	84	B031601110	球形閥 8.5mm	BALL COCK 8.5mm	2
63-1	B052201000	柱塞活門體	PISTON VALVE BODY	1	*61-1 不屬於自動洩壓總成標準零件，須另外訂購。				
63-2	BS18105016300	圓頭自攻螺絲	SCREW	1	*79A 不屬於自動洩壓總成標準零件，須另外訂購。				
63-3	B052401000	閥塞頭	VALVE PLUG	1					
63-4	BG10080012010	O形環	O-RING	1					
63-5	B052501000	閥塞座	VALVE PLUG SEAT	1					
63-6	BJ30101000	球閥固定彈簧	SPRING	1					
63-7	B052301000	彈簧底座	SPRING SEAT	1					
63-8	B052601000	C扣環	C-CLIP	1					
64	BG20250030	方形環	SQUARE RING	1					
65	B052101110	壓力閥輔助片	AUXILIARY PLATE	1					
66	B051001000	壓力閥座	VALVE SEAT	1					
67	B050901000	壓力閥	PRESSURE VALVE	1					
68	B050801120	壓力閥桿	VALVE ROD	1					
69	B051901000	消音片	DAMPER PLATE	1					
70	B050501000	迴水座	OVERFLOW CHAMBER	1					
70-1	B051801110	迴水接頭	OVERFLOW COUPLING	1					
70-2	BS14108025122	圓頭螺絲附華司	SCREW W/ WASHER	4					
71	B050701020	伸縮套皮	COMPRESSION PACKING	1					
71-1	B051101010	平墊圈	WASHER	1					
72	B052001110	固定環	SET RING	1					
73	B051401110	彈簧下座(有牙)	SPRING SEAT	1					

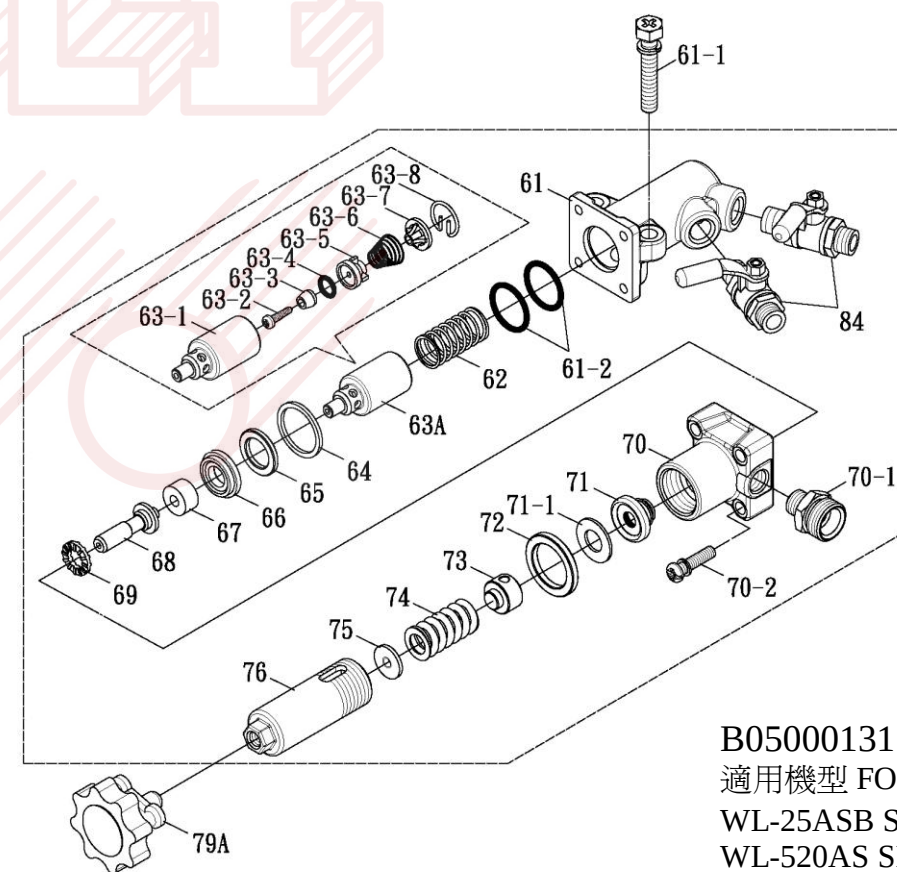

B050001311 (G2)
適用機型 FOR:
WL-25ASB SERIES
WL-520AS SERIES

零件表PARTS LIST 自動洩壓總成 B050001331 (G3) / UNLOADING VALVE ASSEMBLY (G3)

WL-25ASB/520AS系列用

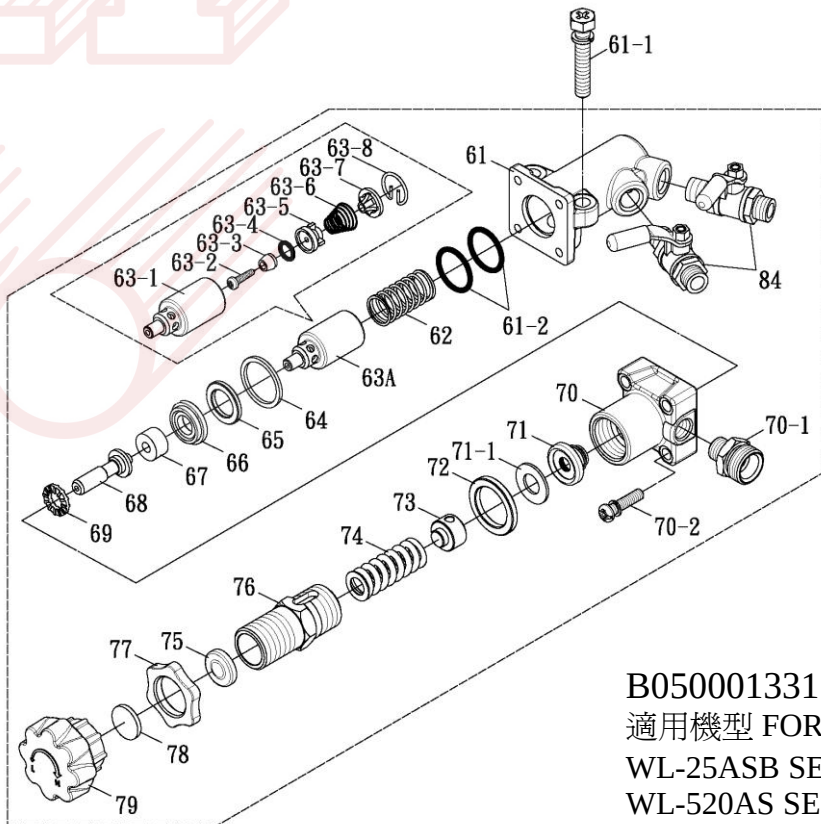
圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY		圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY	
61	B050201000	洩壓汽缸套	UNLOADING VALVE CYLINDER	1		74	BJ40101002	調壓彈簧	PRESSURE REGULATING SPRING	1	
*61-1	BS13110047122	六角十字螺絲附華司	SET BOLT W/ WASHER	2		75	B051301250	彈簧上座	SPRING SEAT (UPPER)	1	
61-2	BG10220027010	O形環	O-RING	2		76	B050301002	調壓彈簧套	PRESSURE REGULATING PIPE	1	
62	BJ50101000	洩壓輔助彈簧	AUXILIARY SPRING	1		77	B052001010	安全弁固定環	SET RING	1	
63A	B052201001	柱塞活門組	PISTON VALVE ASSY	1		78	B053601000	調壓把手墊片	GASKET	1	
63-1	B052201000	柱塞活門體	PISTON VALVE BODY	1		79	B053001011	調壓把手	PRESSURE REGULATING KNOB	1	
63-2	BS18105016300	圓頭自攻螺絲	SCREW	1		84	B031601110	球形閥 8.5mm	BALL COCK 8.5mm	2	
63-3	B052401000	閥塞頭	VALVE PLUG	1		*61-1 不屬於自動洩壓總成標準零件，須另外訂購。 * 61-1 is not a standard part, please order it as needed.					
63-4	BG10080012010	O形環	O-RING	1					2020.02V		
63-5	B052501000	閥塞座	VALVE PLUG SEAT	1							
63-6	BJ30101000	球閥固定彈簧	SPRING	1							
63-7	B052301000	彈簧底座	SPRING SEAT	1							
63-8	B052601000	C扣環	C-CLIP	1							
64	BG20250030	方形環	SQUARE RING	1							
65	B052101110	壓力閥輔助片	AUXILIARY PLATE	1							
66	B051001000	壓力閥座	VALVE SEAT	1							
67	B050901000	壓力閥	PRESSURE VALVE	1							
68	B050801120	壓力閥桿	VALVE ROD	1							
69	B051901000	消音片	DAMPER PLATE	1							
70	B050501000	迴水座	OVERFLOW CHAMBER	1							
70-1	B051801110	迴水接頭	OVERFLOW COUPLING	1							
70-2	BS14108025122	圓頭螺絲附華司	SCREW & WASHER	4							
71	B050701020	伸縮套皮	COMPRESSION PACKING	1							
71-1	B051101010	平墊圈	WASHER	1							
72	B052001110	固定環	SET RING	1							
73	B051401110	彈簧下座(有牙)	SPRING SEAT	1							

B050001331 (G3)
適用機型 FOR:
WL-25ASB SERIES
WL-520AS SERIES

零件表PARTS LIST 安全弁 B050001004 (G2) / SAFETY VALVE ASSEMBLY (G2)

W/WL-25B/45B/520系列用


圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY	
*71-1	BS11110025122	六角螺絲附華司	SET BOLT W/ WASHER	2	
151	B050101031	迴水座	OVERFLOW CHAMBER	1	
152	B050901000	壓力閥	PRESSURE VALVE	1	
153	B051001000	壓力閥座	VALVE SEAT	1	
154	BG20250030	方形環	SQUARE RING	1	
156	B050601110	調壓把手	PRESSURE REGULATING HANDLE	1	
157	BS12108013100	大扁頭螺絲	SCREW	2	
158	B050701000	伸縮套皮	COMPRESSION PACKING	1	
159	B051201000	閥桿保持環	MAINTAINING RING	1	
160	B050801110	壓力閥桿	VALVE ROD	1	
161	B051401001	彈簧下座組	SPRING SEAT ASSY	1	
162	BJ40101000	調壓彈簧	PRESSURE REGULATING SPRING	1	
163	B051301000	彈簧上座	SPRING SEAT (UPPER)	1	
164	BS12108016100	大扁頭螺絲	SCREW	2	
165	B050301000	調壓彈簧套	PRESSURE REGULATING PIPE	1	
*166	B053001001	調壓螺絲組	PRESSURE REGULATING KNOB ASSY	1	
*71-1 不屬於安全弁標準零件，須另外訂購。			* 71-1 is not a standard part, please order it as needed.		
*166 不屬於安全弁標準零件，須另外訂購。			* 166 is not a standard part, please order it as needed.		
			2020.02V		

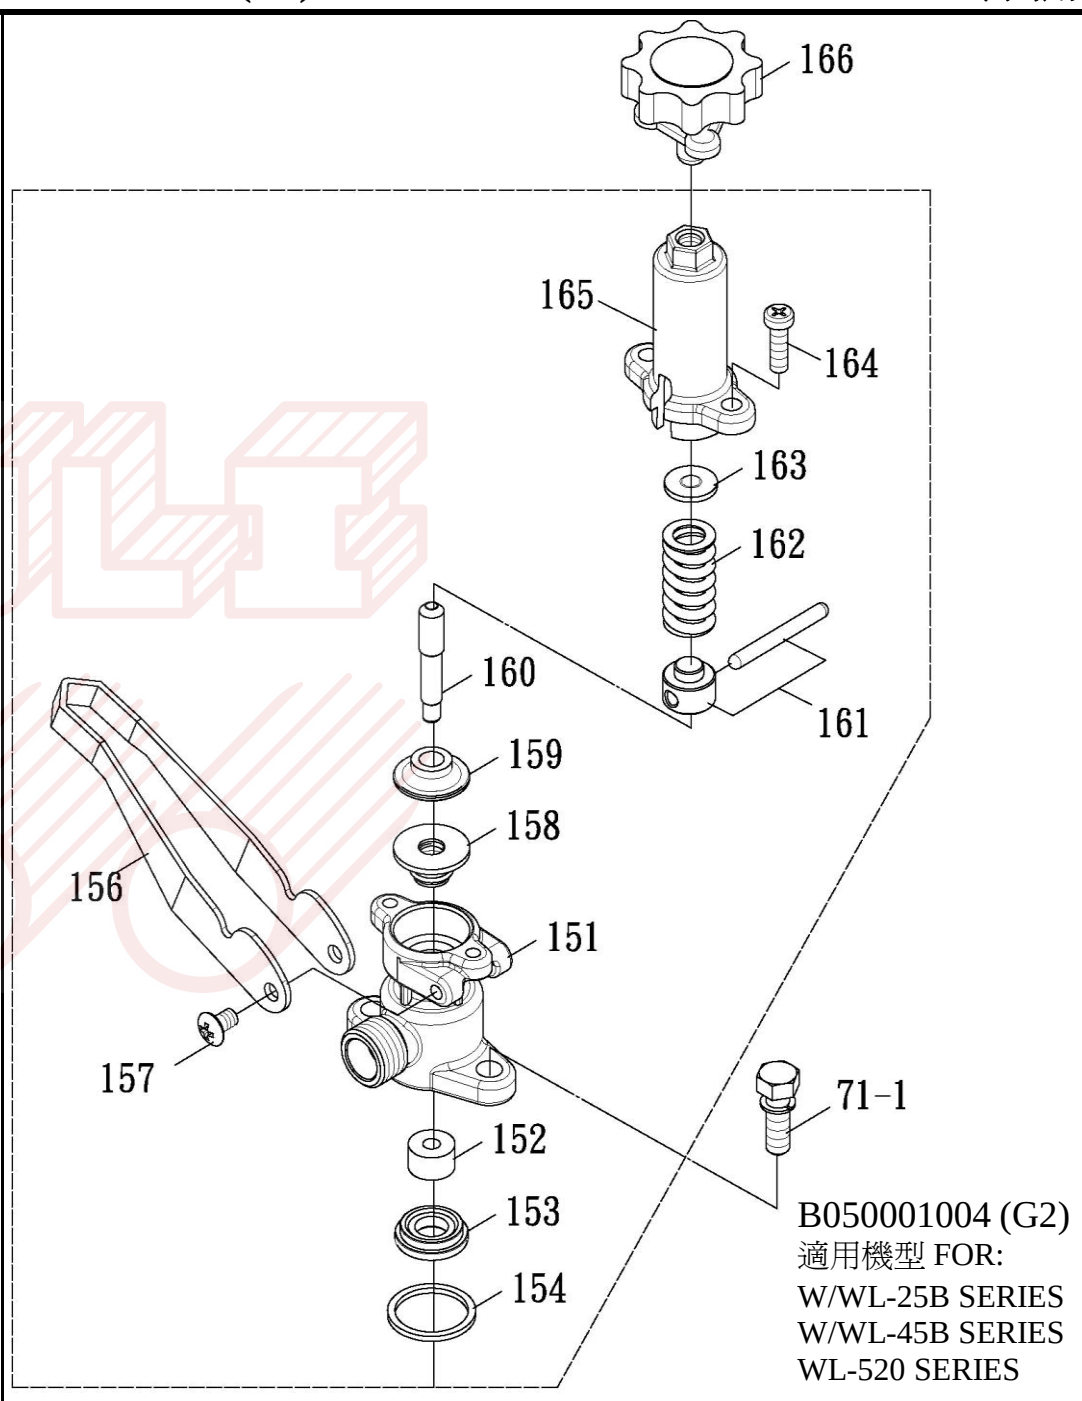

零件表PARTS LIST 安全弁 B050001006 (G3) / SAFETY VALVE ASSEMBLY (G3)

W/WL-25B/45B/520系列用

圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY	
71	B050101031	迴水座	OVERFLOW CHAMBER	1	
*71-1	BS11110025122	六角螺絲附華司	SET BOLT W/ WASHER	2	
72	BG20250030	方形環	SQUARE RING	1	
73	B051001000	壓力閥座	VALVE SEAT	1	
74	B050901000	壓力閥	PRESSURE VALVE	1	
75	B050801110	壓力閥桿	VALVE ROD	1	
76	B050701000	伸縮套皮	COMPRESSION PACKING	1	
76-1	B051201000	閥桿保持環	MAINTAINING RING	1	
77	B051401001	彈簧下座組	SPRING SEAT ASSY	1	
N/A	B051401000	彈簧下座(無牙)	SPRING SEAT	1	
N/A	B051501000	調壓橫棒	PRESSURE ADJUSTING PIN	1	
77-2	B053601001	調壓墊片	SPACER	1	
78	BJ40101002	調壓彈簧	PRESSURE REGULATING SPRING	1	
79	B051301250	彈簧上座	SPRING SEAT (UPPER)	1	
80	B050301001	調壓彈簧套	PRESSURE REGULATING SPRING SLEEVE	1	
80-1	BS12108016100	大扁頭螺絲	SCREW	2	
81	B052001010	安全弁固定環	SET RING	1	
82	B053601000	調壓把手墊片	GASKET	1	
83	B053001011	調壓把手	PRESSURE REGULATING KNOB	1	
84	B050601110	調壓把手	PRESSURE REGULATING HANDLE	1	
84-1	BS12108013100	大扁頭螺絲	SCREW	2	
*71-1 不屬於安全弁標準零件，須另外訂購。			* 71-1 is not a standard part, please order it as needed.		
			2020.02V		

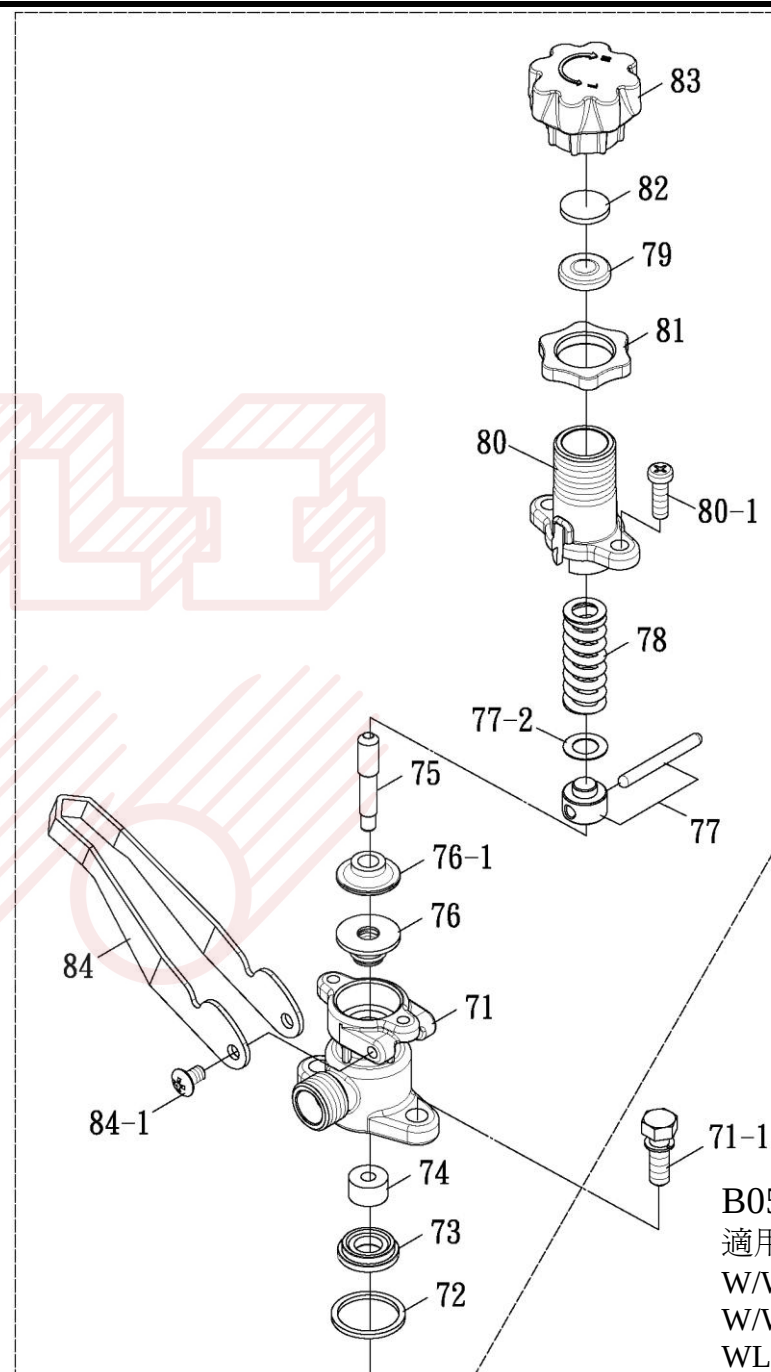

B050001006 (G3)
適用機型 FOR:
W/WL-25B SERIES
W/WL-45B SERIES
WL-520 SERIES