


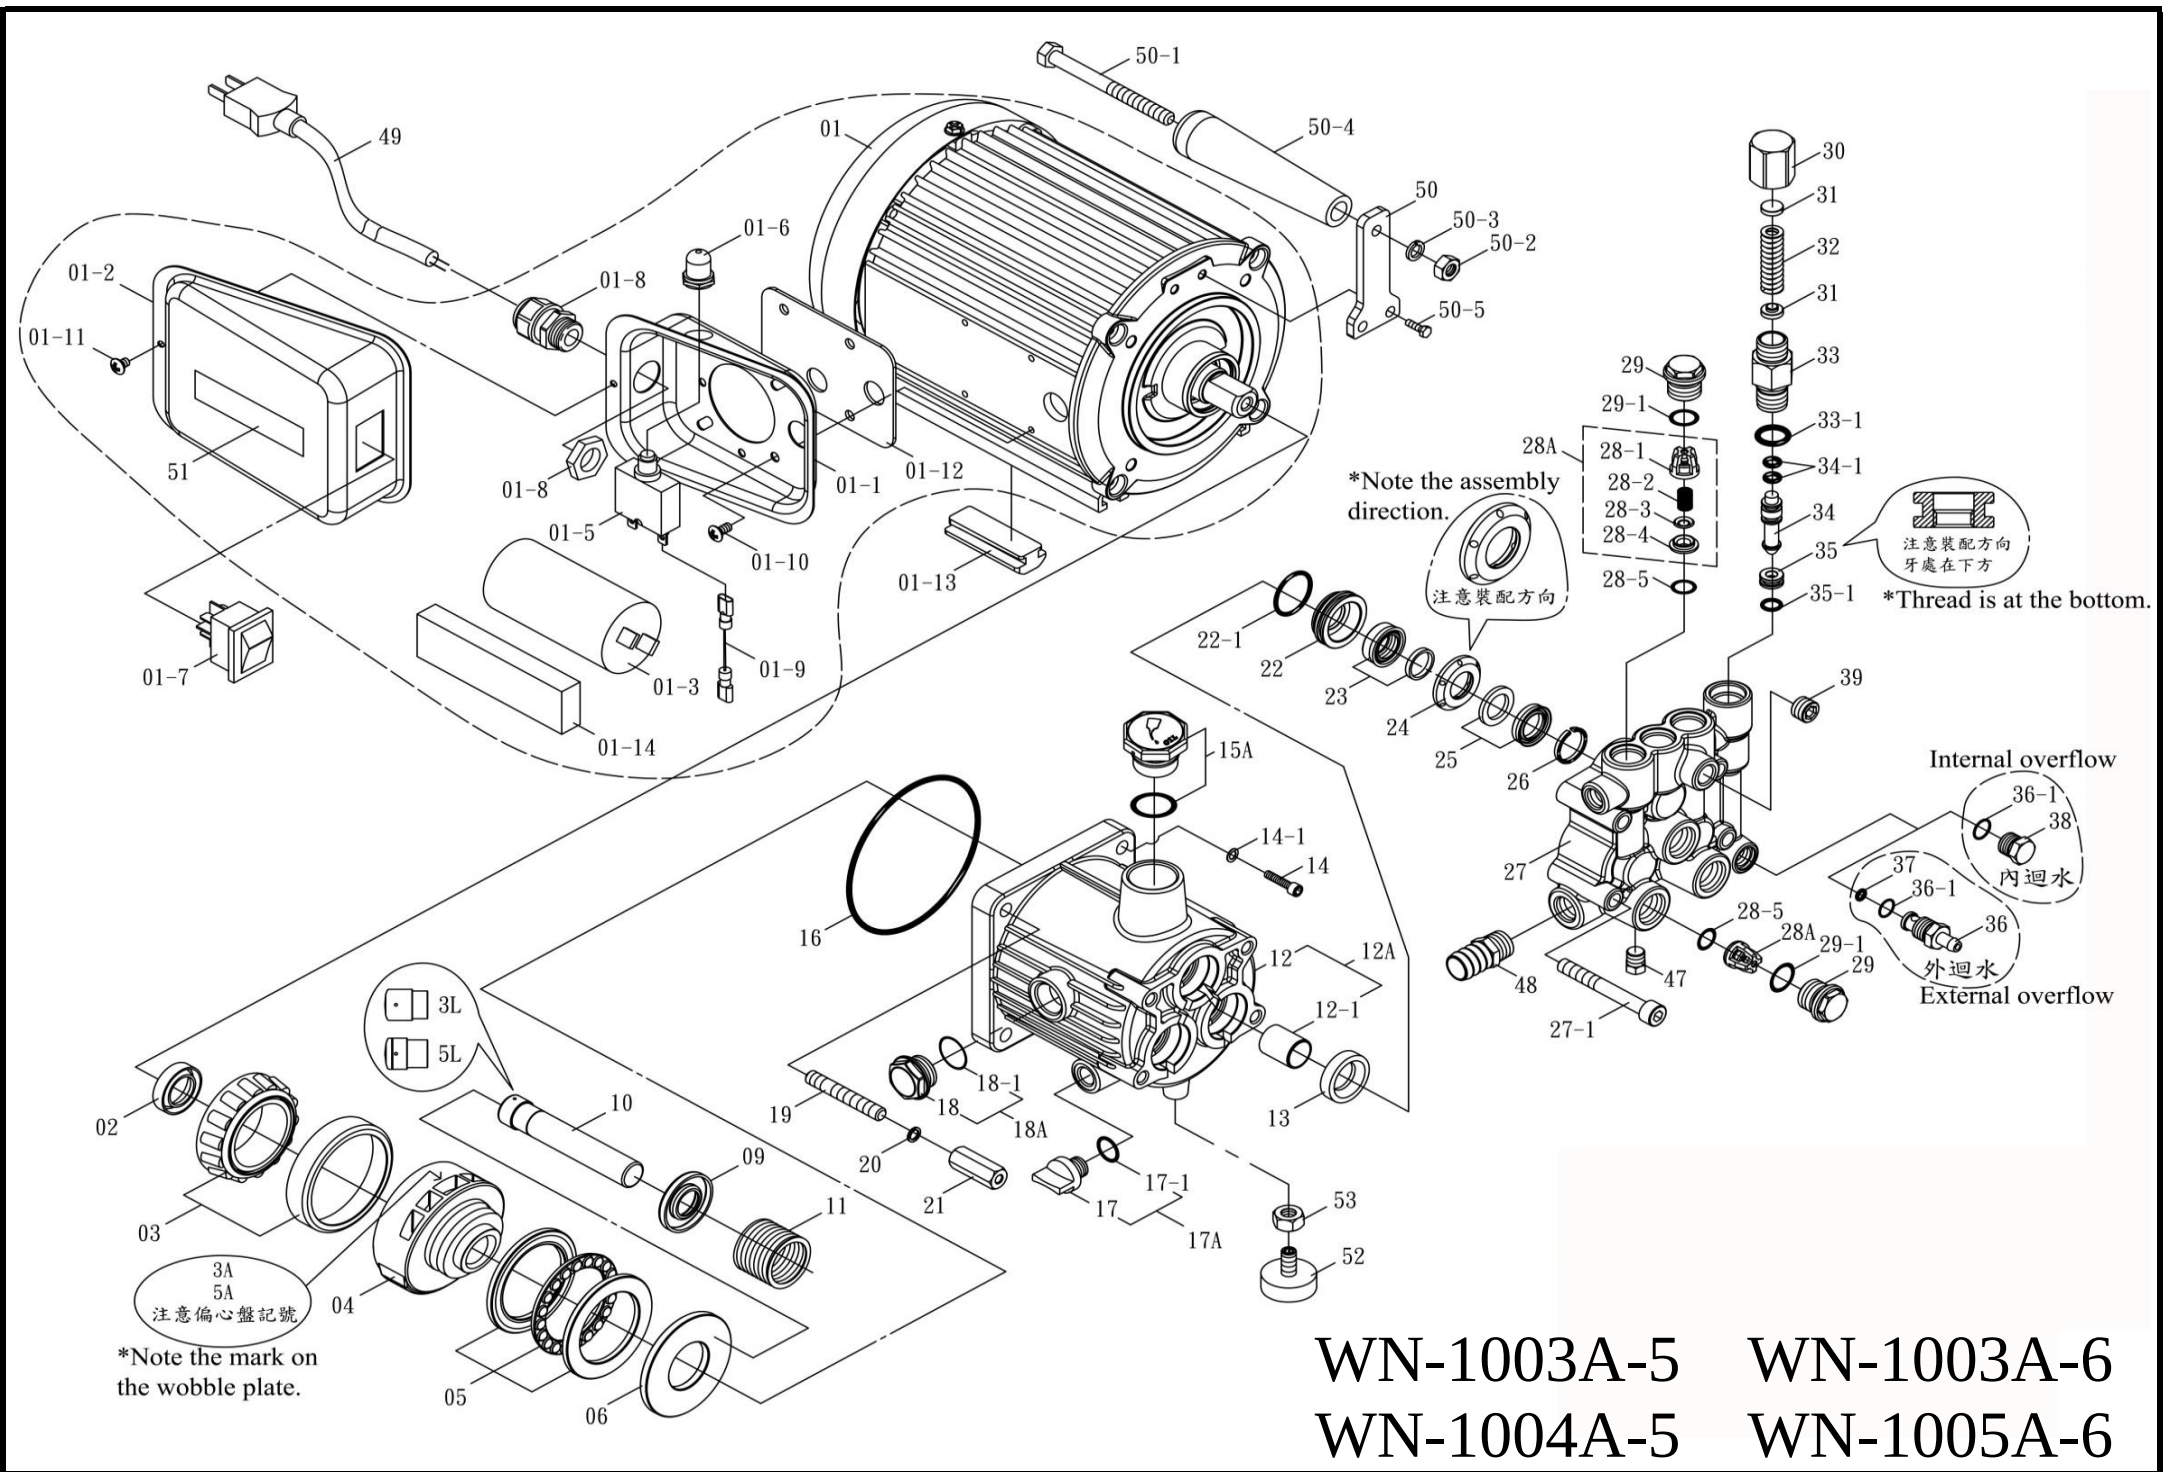

WN-1003A-5
WN-1004A-5

WN-1003A-6
WN-1005A-6

零件表PARTS LIST WN-1003A-5 / WN-1004A-5 / WN-1003A-6 / WN-1005A-6

圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY		圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY	
01	BA20400616000	馬達 (1003A-6)	MOTOR (1003A-6)	1		10	B019528311	陶瓷柱塞+滑靴 (1004/5A)	CERAMIC PISTON + PISTON SHOE	3	
	BA20401016240	馬達 (1005A-6)	MOTOR (1005A-6)			11	BJ00106051	柱塞彈簧	PISTON SPRING	3	
	BA21400616300	馬達 (1003A-5)	MOTOR (1003A-5)			12A	B019501301	軸箱(含引擎培林)	HOUSING W/ BEARING	1	
	BA21401016300	馬達 (1004A-5)	MOTOR (1004A-5)			12	B019501300	軸箱	AXLE HOUSING	1	
01-1	N/A	電器盒	COVER	1		12-1	1019508000	引擎培林	ENGINE BEARING	3	
01-2	N/A	電器盒上蓋	COVER	1		13	B019503000	柱塞油封	PISTON OIL SEAL	3	
01-3	N/A	電容器35uF-250V	CONDENSOR (1003A)	1		14	BS16208030500	內六角螺絲	SCREW	2	
	D020201107	電容器50uF-250V	CONDENSOR (1005A)			14-1	BS32208300	彈簧華司	SPRING WASHER	2	
01-5	B130963115	電流斷路器 9A	CIRCUIT BREAKER 9A	1		15A	B011901014	加油蓋組	OIL INLET COVER ASSY	1	
01-6	N/A	防水套	WATERPROOF CAP	1		16	BG10995103510	O形環	O-RING	1	
01-7	B130563021	電源開關	POWER SWITCH	1		17A	B011801001	排油螺絲組	OIL DRAINAGE SCREW ASSY	1	
01-8	B110565000	電源線固定夾	WIRE BINDER W/ NUT	1		17	B011801000	排油螺絲	OIL DRAINAGE SCREW	1	
01-9	N/A	連接線	WIRE	1		17-1	BG10110015	O形環	O-RING	1	
01-10	N/A	電器盒固定螺絲	SCREW	4		18A	B019229003	油鏡組	OIL WINDOW ASSY	1	
01-11	N/A	電器盒上蓋固定螺絲	SCREW	1		18	B019229020	油鏡	OIL WINDOW	1	
01-12	B019316000	出線皮	PACKING	1		18-1	BG10158020600	O形環	O-RING	1	
01-13	B100563010	馬達腳墊	MOTOR STAND CUSHION	4		19	B019509300	軸箱固定螺絲	SET SCREW	2	
01-14	B100463030	防震墊片	CUSHION	1		20	BS32208300	彈簧華司	SPRING WASHER	2	
02	B019313300	軸承油封	BEARING OIL SEAL	1		21	B019509320	軸箱固定螺帽	SET NUT	2	
03	B019527300	斜軸承	BEARING	1		22	B019504300	防水油封套	LOW PRESSURE SEAL COLLAR	3	
04	B019536300	偏心盤 (1003A)	WOBBLE PLATE (1003A)	1		22-1	BG10290033	O形環	O-RING	3	
	B019536301	偏心盤 (1004/5A)	WOBBLE PLATE (1004/5A)			23	B019506001	防水迫緊	WATERPROOF PACKING	3	
05	B019527301	止推滾珠軸承	BEARING	1			B019507000	防水迫緊墊片	WATERPROOF PACKING GASKET	3	
06	B019517300	平面軸承片(上)	BEARING PLATE (UPPER)	1		24	B019504320	迫緊中間環	U-PACKING SPACER RING	3	
09	B019505300	止逆彈簧固定座	SPRING DISK	3		25	B019506300	U迫緊	U-PACKING	3	
10	B019528310	陶瓷柱塞+滑靴 (1003A)	CERAMIC PISTON + PISTON SHOE	3			B019507300	U迫緊墊圈	U-PACKING GASKET	3	

零件表PARTS LIST WN-1003A-5 / WN-1004A-5 / WN-1003A-6 / WN-1005A-6

圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY		圖號 NO.	編號 CODE	名 稱	DESCRIPTION	Q'TY	
26	B019507310	U迫緊底座	U-PACKING SEAT	3		48	BK31404010	管牙插心	HOSE BARB CONNECTOR	1	
27	B019502300	汽缸	CYLINDER	1		49	B090563000	電源線	POWER CORD	1	
27-1	BS16208060500	內六角螺絲	SCREW	4		50	B019110000	把手片	HANDLE PLATE	1	
28A	B040063301	活門組	VALVE ASSY	6		50-1	BS11208090200	六角螺絲	SCREW	1	
28-1	B040363300	活門帽	VALVE CAGE	6		50-2	BS21208200	六角螺帽	NUT	1	
28-2	BJ26301300	活門彈簧	VALVE SPRING	6		50-3	BS31208200	平面華司	WASHER	1	
28-3	B040163022	活門塞	VALVE PLUG	6		50-4	B019113000	活動把手	HANDLE	1	
28-4	B040263300	活門座	VALVE SEAT	6		50-5	BS11206016200	六角螺絲	SCREW	2	
28-5	BG10124016020	O形環	O-RING	6		52	B100563160	腳墊	CUSHION	1	
29	B019534300	活門固定螺絲	VALVE BOLT	6		53	BS21208300	六角螺帽	NUT	1	
29-1	BG10140018500	O形環	O-RING	6							
30	B019516000	調壓螺帽	PRESSURE REGULATING KNOB	1							
31	B019515000	彈簧上座	SPRING SEAT (UPPER)	2							
32	BJ00106120	調壓彈簧	PRESSURE REGULATING SPRING	1							
33	B019512000	安全弁接頭	SAFETY VALVE CONNECTOR	1							
33-1	BG10140018500	O形環	O-RING	1							
34	B019513000	壓力閥桿	PRESSURE VALVE ROD	1							
34-1	BG10075011500	O形環	O-RING	2							
35	B019514000	壓力閥座	PRESSURE VALVE SEAT	1							
35-1	BG10098013600	O形環	O-RING	1							
36	B019511000	迴水接頭	OVERFLOW CONNECTOR	1							
36-1	BG10100014	O形環	O-RING	1							
37	BG10070011	O形環	O-RING	1							
38	B019511020	內部迴水接頭	INTERNAL OVERFLOW CONNECTOR	1							
39	BS50008050	內六角油塞 PT1/4	PLUG PT1/4	1							
47	BS50004000	六角塞頭 PT1/8	PLUG PT1/8	1					2025.03V.		